

iPAT Extensions

1. Open a 3D scan.
2. Go to the resolution tab, then the iPAT sub tab.
3. Set the iPAT Extensions by changing the acceleration factor 3D.
4. The maximum factor is based on the coil elements in the 3D partition direction.



Parallel imaging in the 3D partition direction